

KM TV tips

Configuring the Amino Remote Control

In order for the remote to transmit the correct signals to control the TV, the remote must be programmed with a three-digit code corresponding to the type of TV in use.

- Identify the make of the TV; i.e. Sony, Magnavox, etc.
- Find the TV make listed in the TV Brand Code tables.
- Simultaneously press and hold the **TV** and **OK** buttons on the remote. After approximately two seconds, the **TV** button will light.
- Release the **TV** and **OK** buttons. The TV button remains illuminated.
- Enter the three-digit brand code according to the make of the TV that is being controlled. As each of the digits are entered, the TV button will briefly flash off and on again. When the third digit has been entered, the TV button will go out. If a TV brand code has been entered that the remote does not recognize, the TV button will flash rapidly for a second and remain illuminated. If this happens: re-enter the correct TV brand code.
- Verify that the remote control works with the TV. Most TV makes have more than one brand code listed in the brand code table—if this is the case try all brand codes that are listed for that make until a suitable match is found. If no brand code is listed for the TV, try brand codes for Philips and NEC TVs.

Controlling a TV

To control the TV press the **TV** button on the remote control. The **TV** mode—select button will light for one second to indicate that the mode has been set.

When any valid function button on the remote is pressed, the **TV** button will light to indicate that a command is being transmitted in TV mode.



TV Brand Codes (Kasson)

A TANDY 094
ABEX 115
ADMIRA 114, 127, 200
ADVENTURA 113
AIKO 105, 112, 197
AIWA 148
ALARON 109, 217
AKAI 33, 110, 111, 157
ALBA 043
ALLERON 109
AMBASSADOR 108
AMERICA 105
AMPRO 234
AMSTRAD 048, 108
ANAM 025, 104, 105, 106, 107
ANAM NATIONAL 104, 214
AOC 036, 041, 102, 103, 111, 116

ARCHER 116
AUDIOSONIC 100
AUDIOVOX 105, 116, 197, 199
BAUER 044
BAUR 100
BAYSONIC 105
BEIJING 151, 155, 156
BELCOR 036, 103, 157
BELL & HOWELL 038, 098, 099
BEON 100
BRADFORD 105
BROCKWOOD 036, 103
BROKSONIC 083, 116, 200
BUSH 100
CANDLE 035, 036, 041, 096, 097, 111, 113, 215

CAPEHART 102
CARNIVALE 041, 157
CARVER 010, 163, 213
CATHAY 100
CELEBRITY 095, 195, 232
CENTURION 041
CHANGHONG 154, 155, 156, 162
CINERAL 105, 197, 199
CITIZEN 035, 036, 041, 092, 093, 094, 096, 097, 105, 111, 112, 113, 149, 197, 215

CLAIRTONE 101
CLARIVOX 100
CONCERTO 035, 097, 215
CONROWA 175
CONTEC 090, 091, 101, 105
CORANDO 094
CRAIG 025, 105
CROSLEY 163, 213
CROWN 094, 105
CURTIS MATHES 016, 036, 038, 041, 055, 069, 075, 093, 094, 098, 111, 114, 127, 149, 163, 196, 198, 212, 213, 215, 219, 228, 229, 231, 233

CXC 105
DAEWOO 029, 030, 033, 036, 072, 094, 100, 103, 105, 112, 119, 153, 157, 158, 159, 160, 197, 199

DANSAI 100
DAYTRON 036, 094, 103
DENON 069

DECCA 027, 100
DIXI 033, 100, 107
DUMONT 001, 036, 089, 103
DWIN 076
DYNATECH 088
ELECTROBAND 095, 101, 195, 232
ELECTROHOME 094
ELIN 100
ELTA 033
EMERSON 000, 002, 006, 007, 008, 009, 011, 036, 038, 041, 081, 082, 083, 084, 085, 086, 087, 090, 092, 094, 098, 101, 103, 105, 108, 109, 200, 217

ENVISION 036, 041, 111
ERRES 100
ETRON 033
FERGUSON 100
FINLUX 100
FISHER 017, 038, 080, 098
FORMENTI 044
FORMONTI 100
FORTRESS 114
FUJITSU 109, 217, 224
FUNAI 048, 105, 109, 141, 150, 152, 217

FUTURETECH 105
GE 013, 016, 020, 036, 041, 075, 076, 077, 078, 079, 081, 086, 104, 114, 127, 196, 199, 212, 214, 228, 229, 231, 233

GEC 027, 100
GEMINI 039
GENEXXA 043
GIBRALTER 089, 103, 111
GOODMANS/TASHIKO 027, 066, 100
GRADIENTE 028, 065, 157, 215
GRANADA 100
GRUNDDIG 178, 179, 180, 181, 182, 183, 184, 185,, 186, 187, 188

GUNPY 105, 109, 217
H/K 072
HALLMARK 036, 041, 086
HANSEATIC 100
HARLEY DAVIDSON 109, 217
HARMAN/KARDON 163, 213
HARVARD 105, 106
HINARI 100, 109
HITACHI 018, 035, 067, 068, 069, 070, 071, 087, 094, 097, 135, 215

HYPSON 100
IMA 105
INDIANA 100
INFINITY 163, 213
INFINITY REFERENCE 010
INTERFUNK 100
INTEQ 001, 089
ITT 061
JANEIL 113
JBL 010, 163, 213
JCB 095, 195, 232
JENSEN 031
JINXING 153, 154, 155, 156, 157, 162, 163, 164, 165, 169, 173

JVC 026, 028, 064, 065, 066, 084
KAWASHO 090
KAYPANI 102
KEC 105
KENWOOD 036, 041, 103, 111
KLOSS 063, 072, 113
KONKA 221, 222, 225, 226
KTV 041, 092, 094, 101, 105, 111

LEYCO 100
LG (GOLDSTAR) 003, 012, 035, 036, 041, 073, 074, 086, 094, 097, 100, 103, 111, 115, 215

LIESENK & TTER 100
LLOYTRON 094
LOEWE 100
LOGIK 099, 177
LUXMAN 035, 097, 215
LXI 010, 036, 038, 041, 062, 076, 086, 098, 163, 196, L 213, 228, 233

MAGNAVOX 010, 034, 039, 040, 041, 042, 058, 059, 060, 061, 063, 066, 096, 111, 163, 213, 217, 218, 230

MAJESTIC 099
MARANTZ 010, 022, 036, 041, 100, 111, 213

MARK 100
MATSUSHITA 019
MATSUI 027, 033, 100
MEDIATOR 100
MEGATRON 036, 041, 069, 086, 116
MEI 101
M-ELECTRONIC 075, 089, 100, 196
MEMOREX 022, 033, 036, 038, 041, 057, 086, 097, 098, 099, 177, 215, 217

METZ 179, 183, 189, 190, 191, 192, 193, 194
MGA 022, 036, 041, 056, 057, 086, 103, 111

MIDLAND 001, 019, 075, 076, 089, 094, 115, 200, 212, 228, 233

MINUTZ 079
MITSUBISHI 022, 032, 036, 056, 057, 066, 079, 086, 103, 110, 114, 138

MONTGOMERY 109
MOTOROLA 022, 041, 104, 114, 127, 157, 214

MTC 035, 036, 041, 088, 093, 097, 101, 103, 111, 149, 215

MULTITECH 088, 105, 127
NAD 036, 055, 062, 086, 105
NEC 024, 035, 036, 041, 066, 097, 103, 105, 111, 132, 171, 215

NECKERMANN 100
NEI 100
NIKKAI 027, 043, 100, 115
NIKKO 036, 041, 086, 105, 111, 112, 197

NOSHI 053
NOVABEAM 072
NTC 105, 112, 157

ONWA	041, 105, 157, 197	SANYO	017, 023, 027, 038, 066, 080, 091, 098, 123, 125, 126, 202, 203, 204, 205, 206, 207, 208, 209, 210, 211	UNIVERSAL	078, 079
OPTIMUS	038, 055, 105	SBR	100	UNIVERSUM	100
OPTONICA	019, 054, 098, 114, 198	SCHEIDER	100	VECTOR	036, 041, 111
ORION	083, 100, 127, 217	SCIMITSU	036, 103, 157	VESTEL	100
OSAKI	027, 115	SCOTCH	036, 041, 086	VICTOR	028, 065
OTTO VERSAND	100	SCOTT	036, 041, 083, 086, 094, 103, 105, 109, 217	VIDEO CONCEPT	110
PANASONIC	010, 019, 025, 075, 083, 104, 109, 131, 137, 143, 200, 212, 214	SEARS	010, 016, 017, 035, 036, 038, 041, 048, 052, 062, 076, 080, 086, 097, 098, 109, 141, 163, 196, 213, 215, 217, 228, 233	VIDIKRON	010, 021, 163, 213
PANDA	154, 172	SEMIVOX	105	VIDTECH	036, 041, 086, 103
PENNY	016, 019, 036, 041, 052, 053, 062, 073, 075, 076, 078, 079, 086, 093, 094, 103, 104, 111, 115, 116, 212, 215, 228, 231, 233	SEMP	062	VIKING	113
PEONY	156, 162	SHANGHAI	156, 168	WARDS	010, 036, 041, K 045, 054, 058, 059, 060, 061K, 077, 078, 079, 086, 097, 099, 103, 109, 111, 177, 213, 215, 217
PHILCO	036, 041, 058, 059, 060, 061, 062, 063, 069, 075, 079, 096, 103, 111, 149, 157, 196, 213	SHARP	046, 047, 054, 066, 091, 111, 114, 127	WATSON	100
PHILIPS	010, 040, 069, 100, 157, 163, 200, 213	SHOGUN	036, 103, 157	WHITE	036, 041, 111, 200
PHONOLA	100	SIGNATURE	099, 177	XOGEGO	161, 162, 166, 174, 176
PILOT	010, 036, 041, 094, 103, 111, 163	SIMPSON	058, 096, 218	YAMAHA	036, 041, 103, 111
PIONEER	051, 055, 087, 157, 223	SOLAVOX	115	YOKO	100
PORTLAND	036, 094, 103, 105, 112, 198	SONOKO	100	ZENITH	001, 004, 089, 099, 105, 177, 197, 200
PRICECLUB	093,	SONTEC	100	ZONDO	116
PRINCETON	227	SONY	037, 045, 066, 084, 095, 128, 144, 195, 232		
PRISM	075, 157, 197, 212	SOUNDESIGN	036, 041, 086, 096, 105, 109, 217		
PROSCAN	075, 076, 228, 233	SOUNDWAVE	100		
PROTECH	100	SPECTRICON	116		
PROTON	036, 050, 086, K 094, 102, 116, 196, 219	SQUAREVIEW	048, 141		
PULSAR	001, 036, 041, 089	SSS	036, 089, 103, 105, 157		
PULSER	103	STAR-LITE	105		
QUASAR	025, 075, 089, 104, 157, 212, 214	SUPREM	095, 195, 232		
QUELLE	100	SUPRE-MACY	113		
RADIO SHACK	036, 038, 041, 054, 075, 094, 103, K 105, 112, 115, 127, 157, 196, 215, 228, 233	SURPA	035, 097		
RADIOLA	100	SYLVANIA	010, 036, 041, 044, 058, 059, 060, 061, 063, 096, 111, 157, 163, 213		
RCA	005, 014, 015, 018, 019, 036, 041, 049, 053, 075, 076, 077, 087, 103, 114, 212, 216, 223, 228, 229, 231, 233, 235, 236, 237	SYMPHONIC	048, 141		
REALISTIC	036, 038, 041, 054, 086, 094, 097, 098, 103, 105, 111, 115, 157, 196, 215	SYSLINE	100		
RHAPSODY	101	TANDY	027, 043, 114, 127		
R-LINE	100	TATUNG	027, 088, 100, 104, 116, 214		
RUNCO	001, 041, 089, 098, 105, 111, 157, 220	TCL	156, 163, 170		
SAISHO	033, 108	TECHNOL ACE	109, 217		
SAMPO	036, 041, 094, 102, 105, 111, 115	TECHNICS	019, 075, 212		
SAMSUNG	033, 034, 035, 036, 041, 086, 093, 094, 097, 100, 103, 111, 115, 149, 215	TECHWOOD	035, 075, 097, 157, 212, 215		
SAMSUX	094	TEKNIKA	010, 022, 035, 036, 057, 093, 094, 096, 097, 099, 103, 105, 109, 112, 113, 157, 163, 177, 197, 213, 215, 217		
SANSEI	199	TELEFUNKEN	157, 215		
SANSUI	200	TELETECH	033		
		TERA	050		
		THAKRAL	167		
		THORM	100		
		TMK	035, 036, 041, 086, 097, 108, 215		
		TNCI	001		
		TOSHIBA	038, 052, 062, 066, 093, 098, 130, 149		
		TOSONIC	101		
		TOTEVISION	094		
		TRICAL	091		