

KM TV tips

Configuring the NextLevel SRC-200 Remote

In order for the remote to transmit the correct signals to control the TV, the remote must be programmed with a three-digit code corresponding to the type of TV in use.

Programming with the TV Code

- Identify the make of the TV; i.e. Sony, Magnavox, etc.
- Find the TV make listed in the TV Brand Code tables.
- Press the **MUTE** button and hold it down for three seconds until the **LED** at the top of the remote control flashes rapidly.
- While the **LED** button is flashing, enter the three digit code that corresponds to the brand name of the TV. If the code is valid, the **LED** will flash on and off three times and then remain off. *If an invalid code is entered or a 20 second lapse in button presses occurs, the LED will turn off and the remote control will return to normal operation. You will need to repeat the above procedure to program the TV code.*

Programming by using Code Search Method

- Press the **MUTE** button and hold it down for three seconds until the **LED** at the top of the remote control flashes rapidly.
- Press the **POWER** button. The **LED** will light up and remain solidly lit.
- Press the up arrow **▲** to scan through all TV codes. When you reach the correct TV code the TV will automatically turn on, or off, if it was previously on. Note that the **LED** will flash rapidly once you have scanned through all the codes.
- Press the **SELECT** button to store the TV code. The **LED** flashes rapidly, then stops, indicating that the TV code has been stored.
- Repeat procedure for each remote control.

If you press the up arrow **▲** too rapidly, you may pass the TV code before the time the TV turns on or off. If you are not sure you are storing the correct TV code, press the down arrow **▼** slowly to cycle back through codes that have been previously scanned. When the TV turns off, or on, press **SELECT** at that point to store the TV code.



TV Brand Codes

A-Mark 120
Akai 032, 070
Alba 113
Amstrad 033
Anam 021, 041, 121
Anam-National 009, 021
AOC 005, 006, 019, 020, 120
Archer 120
ASA 047
Audiovox 120
Bauer 111
Candle 006, 022, 023, 025
Capehart 019
Citizen 006, 016, 021, 022, 023, 024, 025, 026
Concerto 023
Contec 027, 028, 041, 091
Craig 021, 041
Crown 026
Curtis Mathes 006, 016, 026
CXC 041
Daewoo 005, 024, 026, 029, 030, 031, 032
Daytron 026
Dixi 032, 088
Dumont 047
Electrohome 026
Elta 032
Emerson 023, 026, 027, 028, 033, 034, 035, 036, 037, 038, 039, 040, 041, 122
Envision 006
Etron 032
Finlux 047
Fisher 042, 090
Formenti 111
Fortress 105
Fujitsu 034, 041
Funai 034, 041
Futuretech 041
GE 003, 008, 009, 015, 023, 043, 044
GE-Spacemaker 040
Genexxa
Goldstar 005, 023, 026, 045, 046, 088
Goodmans/Tashiko 017
Grundig 047
H/K-TV-Projector 062
Hallmark 023
Hinari 034
Hitachi 023, 026, 048, 049, 050, 051, 052, 053, 055, 126
Infinity 066
JBL 066
Jensen 056
Jerrold 129, 130, 131
JVC 057, 058, 059, 060
Kawasho 061
Kenwood 006
Kloss 022, 110
Kloss-Novabeam 062
KTV 026, 039, 041
Lloytron 026
Loewe 088

Logik 018
Luxman 023
LXI 003, 063, 066, 090, 095, 117
Magnavox 006, 020, 025, 064, 065, 066, 067, 068, 069, 110
Marantz 006, 032, 066, 088
Matsui 032, 109
Memorex 032, 090, 018
MGA 004, 005, 006, 023
Minerva 047
Mitsubishi 004, 005, 017, 023, 070, 072, 123
MTC 005, 006, 016, 023, 031
NAD 002, 117
NEC 005, 006, 007, 017, 023, 127
Nikkai 112, 113, 118
Nordmende 051, 062
Novabeam 062
Oak 138
Onwa 041
Optonica 105, 107
Osaki 112
Osume 012
Panasonic 008, 009, 010, 011, 012, 066, 074, 075, 139, 140
Penney 003, 005, 006, 014, 016, 025, 026, 043, 096
Philco 005, 006, 025, 064, 065, 068, 110
Philips 066, 088
Pioneer 002, 026, 048, 051, 076, 133, 134
Portland 005, 026
Proton 019, 023, 026, 124
Pulsar 001
Quasar 008, 009 077
Quelle 047
Radio Shack 026, 041, 107, 112
RBM 047
RCA 003, 005, 014, 015, 048, 078, 079, 080, 081, 082, 083, 084, 085, 086, 087
Realistic 090
Saba 051
Saisho 032, 109
Sampo 006, 019
Samsung 005, 006, 016, 023, 026, 032, 088, 112
Sanyo 017, 042, 089, 090, 091, 092, 109
SBR 088
Schneider 088
Scientific Atlanta 135, 136
Scott 026, 034, 037, 041, 093
Sears 000, 003, 023, 034, 042, 046, 066, 090, 094, 095, 096, 097, 098, 099, 100, 101, 102, 103, 104, 117
Sharp 017, 026, 091, 105, 106, 107, 108, 128
Siemens 091
Signature 018
Solavox 112

Sony 000, 017, 109, 119, 122
Soundesign 023, 025, 041
Spectricon 020 120
SSS 005 041
Supra 023
Supre-Macy 022
Sylvania 006, 025, 064, 065, 066, 068, 110, 111
Tandy 105, 113
Tatung 008, 009
Technics 008
Techwood 023
Teknika 004, 005, 016, 018, 022, 023, 024, 025, 026, 034, 041, 114, 115
Teleavia 051
Teletech 032
Tera 124
Thomson 051
Thomson-Projector 051, 116
TMK 023
Tocom 132
Toshiba 016, 017, 047, 090, 096, 117, 118
Tosonic 028
Totevision 026
Universal 043
Vector Research 006
Tictor 057
Video Concepts 070
Vidtech 005, 023
Viking 022
Wards 005, 006, 015, 018, 023, 034, 043, 064, 065, 067, 068, 107, 119
Yamaha 005, 006
Zenith 001, 018, 137
Zonda 120