

KM TV tips

Configuring the NextLevel SRC-300A Remote

In order for the remote to transmit the correct signals to control the TV, the remote must be programmed with a three-digit code corresponding to the type of TV in use.

Programming with the TV Code

- Identify the make of the TV; i.e. Sony, Magnavox, etc.
- Find the TV make listed in the TV Brand Code tables.
- Press the **LED** button and hold it down until the **LED** flashes rapidly.
- Press the **REC** button. The **LED** stops blinking at this point and stays on solid.
- Press and release the **C** button. The remote is now in programming mode.
- Enter the three-digit code that corresponds to the brand name of the TV.

If the code is valid, the LED will flash on and off three times and then remain off.

If the code is invalid or a 20 second lapse in button presses occurs, the LED will turn off and the remote control will return to normal operation. You will need to repeat the above procedure to program the TV code.

Programming by using Code Search Method

- Press the **LED** button and hold it down until the **LED** button flashes rapidly.
- Press the **REC** button. The **LED** will light up and remain solidly lit.
- Press and release the **POWER** button. The remote is now in TV code scan programming mode.
- Press the up arrow **▲** to scan through all TV codes. When you reach the correct TV code the TV will automatically turn on, or off, if it was previously on. Note that the **LED** will flash rapidly once you have scanned through all the codes.
- Press the **SELECT** button to store the TV code. The **LED** flashes rapidly, then stops, indicating that the TV code has been stored.
- Repeat procedure for each remote control.

If you press the up arrow **▲** too rapidly, you may pass the TV code before the time the TV turns on or off. If you are not sure you are storing the correct TV code, press the down arrow **▼** slowly to cycle back through codes that have been previously scanned. When the TV turns off, or on, press **SELECT** at that point to store the TV code.



TV Brand Codes

AOC	005, 006, 019, 024, 032, 120, 140	JC Penney	003, 005, 006, 014, 016, 043, 072, 087, 096, 098, 125, 131, 149, 165, 194, 202, 206, 210, 223, 224, 231, 238, 242	Runco	001, 006, 243
Admiral	003, 018, 041, 087, 125, 129, 187, 194, 210	JVC	057, 059, 060, 234, 235, 238	SAA	145
Aiko	024	Jensen	056	SSS	005, 041
Aiwa	194, 251	KEC	041	Saba	051, 116, 142
Akai	000, 005, 006, 032, 070, 072, 075, 107, 108, 120, 135, 139, 149	KMC	098, 224	Saisho	032, 033, 109, 120
Alaron	187	KTV	005, 006, 039, 041, 098, 224	Sampo	006, 019, 156, 194
Amark	032, 098, 120, 224	Kawasho	061	Samsung	005, 006, 010, 016, 027, 032, 098, 120, 155, 157, 167, 194, 202, 219, 221, 224, 229, 244, 246, 247
Amstrad	033	Kenwood	006, 235, 251	Sansui	176, 225, 235, 251
Anam	005, 009, 021, 032, 041, 120, 121, 183	Kloss	022, 110, 175	Sanyo	042, 089, 092, 109, 184, 194, 217, 219, 244
Anam-National	211	Konka	236	Scott	005, 006, 037, 041, 093, 098, 187, 194, 224, 247
Archer	032, 120	LXI	003, 005, 010, 027, 087, 125, 129, 131, 132, 194, 223, 251	Sears	003, 005, 010, 016, 027, 042, 087, 096, 098, 099, 101, 012, 104, 125, 131, 132, 184, 187, 194, 202, 217, 223, 224, 251
Audiovox	024, 032, 041, 120, 130	Lloytron	098, 224	Sharp	017, 054, 098, 129, 141, 200, 224, 254
Audio Dynamics	238	Lodgenet	018	Signature	010, 018, 027, 251
BPL	144	Loewe	010, 027	Sony	000, 109, 180, 189, 232
Bell & Howell	018, 194	Logik	018	Soundesign	005, 025, 041, 187, 251
Broksonic	005, 010, 027, 174, 176, 225, 226, 245	Luxman	005	Spectricon	032, 120
CXC	041	MGA	005, 006, 071, 072, 149, 187, 194, 240	Starlite	041
Candle	005, 006, 022, 025	MTC	005, 006, 010, 016, 024, 027, 202, 251	Supra	005, 022
Capehart	019	Magnasonic	010, 024, 027, 129, 131, 187	Sylvania	005, 006, 010, 024, 025, 027, 068, 098, 110, 132, 175, 194, 224, 237, 240, 251
Carver	010, 027	Magnavox	000, 005, 006, 008, 010, 017, 024, 025, 027, 054, 067, 068, 098, 110, 132, 154, 167, 175, 187, 194, 216, 224, 231, 237, 251, 254	Symphonic	132, 179, 251
Centurion	005, 006, 194	Majestic	018	TIVO	136, 137, 138
Citizen	005, 006, 010, 016, 018, 022, 024, 025, 027, 098, 202, 224	Marantz	005, 006, 010, 027, 068, 072, 149, 237, 238	TMK	005
Concerto	005, 010, 027	Marta	223	Tandy	098, 113, 129, 224, 251
Contec	017, 041, 054, 181, 185, 227	Matsui	010, 027, 032, 109, 120	Tatung	009, 010, 027, 183, 211
Corando	098, 224	Memorex	005, 018, 032, 072, 120, 149, 187, 194, 219, 223, 242, 244, 248, 251	Teac	251
Coronado	098, 224	Midland	001, 003, 087, 165	Technics	008, 012, 165, 242
Craig	021, 041	Mitsubishi	005, 006, 017, 054, 070, 071, 072, 123, 129, 149, 187, 194, 239, 240	Techwood	005, 165
Crown	041, 098, 224	Multitech	041, 251	Teknika	005, 010, 016, 018, 022, 024, 025, 027, 041, 072, 098, 114, 149, 187, 202, 223, 224, 251
Curtis-Mathes	005, 006, 010, 016, 018, 027, 059, 098, 125, 131, 194, 202, 210, 224, 231, 251	NAD	002, 005, 131, 166	Telerent	018, 098, 224
Daewoo	005, 010, 024, 027, 029, 030, 032, 098, 120, 130, 214, 215, 224, 247, 250, 252	NEC	005, 006, 007, 183, 191, 194	Teletech	032, 120
Daytron	006, 024, 098, 194, 224	National	008, 010, 011, 012, 027, 146, 190, 211	Thomson	051, 116, 142
DBX	238	Nikkai	010, 027, 113, 131	Toshiba	016, 017, 054, 096, 131, 194, 202, 240, 245, 247
Denon	052	Onwa	041	Totevision	098, 223, 224
Dimensia	125	Optimus	012, 166, 194, 242	Universal	043, 206
Dixi	010, 027, 032, 120	Optonica	129	Vector Research	006, 238
Dumont	001	Orion	010, 027, 037, 176, 212, 225, 226	Victor	057, 060, 235
Electrohome	072, 098, 149, 224, 240	Osume	017, 054	Video Concepts	070, 238, 251
Emerson	005, 017, 033, 035, 037, 038, 039, 041, 054, 098, 130, 132, 141, 143, 176, 181, 185, 187, 194, 203, 222, 223, 224, 225, 226, 227, 251, 252, 253	Panasonic	008, 009, 010, 011, 012, 127, 148, 165, 177, 183, 211, 218, 231, 241, 242	Vidtech	005
Envision	006	Philco	005, 006, 010, 024, 025, 027, 052, 067, 068, 072, 098, 110, 149, 175, 176, 183, 216, 224, 237, 251	Viking	022
Fisher	042, 099, 194, 217	Phillips	005, 006, 010, 025, 027, 068, 098, 136, 137, 138, 150, 216, 220, 223, 224, 237, 251	Wards	000, 005, 006, 010, 018, 027, 043, 067, 068, 125, 141, 182, 187, 194, 206, 224, 251
Fujitsu	187	Pioneer	002, 008, 048, 051, 076, 131, 166, 235	Westinghouse	037, 041, 130, 176, 194
Funai	024, 041, 132, 187, 251	Portland	005, 024, 098, 224	Yamaha	005, 006, 238, 251
Futuretech	041	Pulsar	001, 024, 248	Yorx	006, 194
GE	003, 005, 008, 009, 043, 0087, 125, 130, 143, 147, 165, 182, 183, 206, 210, 211, 228, 231, 233, 248	Quasar	008, 009, 012, 165, 183, 211, 231, 242	Zenith	001, 018, 024, 178, 223, 225, 235, 248, 249, 251
Goldstar	005, 006, 010, 027, 045, 098, 168, 194, 223, 224, 230, 238	RCA	003, 005, 008, 014, 048, 063, 072, 078, 079, 080, 084, 085, 086, 087, 125, 130, 147, 149, 160, 182, 183, 210, 231, 233, 251, 254	Zonda	032, 120
Gradiente	057, 060	Radio Shack	003, 005, 041, 072, 087, 0989, 141, 149, 194, 224, 230, 242, 251		
Granada	010, 027	Realistic	005, 006, 035, 041, 098, 141, 194, 222, 223, 224, 251		
Hallmark	005				
Harman Kardon	238				
Hinari	010, 027, 187				
Hitachi	005, 017, 018, 024, 048, 049, 050, 051, 052, 053, 054, 055, 098, 116, 126, 142, 160, 185, 224, 231, 251				
Infinity	010, 027				
JBL	010, 027				