

# KM TV tips

## Setting Parental Control Locks (Amino)

**Getting into Parental Controls** - *About this Setting:* Parental controls allow you to restrict what channels are available to watch at any given time.

Go into **SETTINGS**.

Move cursor towards Parental Controls so that it highlights the **CHANGE** button next to Parental Controls  
Hit **OK** to go into the parental control settings.

**Activating/Deactivating Parental Controls** - *About this Setting:* You must enable this setting in order to enable your Parental Controls.

Go into **Parental Controls**.

Move cursor over to the white box by **Enable Parental Control**.

If there is no check in the white box press **OK** to check the box and activate **Parental Controls**.

If there is a check in the white box press **OK** to uncheck the box and deactivate the **Parental Controls**.

Move the cursor down to the **DONE** button on the screen and press **OK** on your remote.

**Changing the Available Movie Ratings** - *About this Setting:* This setting is used to determine the highest rating movie available to be watched on your TV, without entering a Parental Code. Thus if "R" is selected movies of "R" rating or less can be watched without entering a code.

Go into **Parental Controls**.

Move the cursor to highlight the box next to **Movie Ratings**, the default rating is "R"

To change the current rating press **OK** and a list of options will be shown.

Use the arrow keys to highlight the option you wish to use and press the **OK** button again.

Move the cursor down to the **DONE** button on the screen and press **OK**.

**Changing the Available TV Ratings** - *About this Setting:* This setting is used to determine the highest TV rating available to be watched on your TV, without entering a Parental Code. Thus if "TV-14" is selected shows with a rating of "TV-14" or less can be watched without entering a code.

Go to **Parental Controls**.

Move cursor to highlight box next to **TV Rating**, the default rating is "TV-14"

To change the current rating press **OK** and a list of options will be shown.

Use the arrow keys to highlight the option you wish to use and press the **OK** button again.

Move the cursor down to the **DONE** button on the screen and press **OK**.

**Changing Content Ratings** - *About this Setting:* This setting is used to apply parental blocks to particular content ratings such as dialog and violence. Any program that has a rating based on these factors will require a Parental Code to be watched.

Go into **Parental Controls**.

Move the cursor down the white box next to the **Content Rating** you wish to restrict.

Press the **OK** button if the box is not checked to add a content block.

Press the **OK** button if the box is checked to removed a content block.

Move the cursor down to the **DONE** Button on the screen and press **OK** to save the changes.

**Block Unrated Programs** - *About this Setting:* This setting allows you to lock out all shows without a rating, forcing a Parental Code to be entered to watch those shows.

Go into **Parental Controls**.

Move the cursor over to the white box next to **Block Unrated Programs**.

Press the **OK** button if the box is not checked to add a content block.

Press the **OK** button if the box is checked to removed a content block.

Move the cursor down to the **DONE** button on the screen and press **OK** to save the changes.

**Show Info for Blocked Programs** - *About this Setting:* This setting allows you to control whether the info is displayed on a program which is blocked by parental settings.

Go into **Parental Controls**.

Move the cursor to the white box next to **Show Info For Blocked Programs**.

If the box is checked press the **OK** button on your remote to not show info on blocked programs.

If the box is not checked press the **OK** button on your remote to show info on blocked programs.

Move the cursor down to the **DONE** Button on the screen and press **OK** to save the changes.

