

KM TV tips

Setting Parental Control Locks (SRC-200/SRC-300A/SRC-350)

TO START

- Press **MENU** on your remote
- Using the blue arrow keys, highlight **PARENTAL CONTROL** and press **SELECT**
- Now proceed to set up passwords and/or lock the service

SET UP PASSWORD(S)

- Using the blue arrow keys...
 - Highlight *SET UP PASSWORDS*, and press **SELECT**
 - Highlight *CREATE PARENTAL PASSWORD* or *CREATE PURCHASE PASSWORD* and press **SELECT**
- Press **EXIT** until you return to TV viewing.

CHANGE OR REMOVE YOUR PASSWORD(S)

- Using the blue arrow keys, highlight *CHANGE OR REMOVE PARENTAL PASSWORD* and press **SELECT**
- Using the numeric keypad on your new remote, enter your old password and press **SELECT**
- Press **EXIT** until you return to TV viewing

LOCK BY CHANNEL(S)

- Using the numeric keypad on your remote, enter your 4 digit Password
- Using the blue arrow keys...
 - Highlight *LOCK BY CHANNEL* and press **SELECT**
 - Highlight specific channel(s) you want to lock out, and press **SELECT**
- Press **EXIT** until you return to TV viewing

LOCK BY RATING OR CONTENT

- Using the numeric keypad on your new remote, enter your 4 digit Password
- Using the blue arrow keys...
 - Highlight *LOCK BY TV RATINGS* or *LOCK BY MOVIE RATINGS* and press **SELECT**
 - Highlight Rating and/or Content categories you want to lock out, and press **SELECT**
- Press **EXIT** until you return to TV viewing

LOCK TV VIEWING FOR BLOCKS OF TIME

- Using the numeric key pad on your new remote, enter your 4 digit Password
- Using the blue arrow keys...
 - Highlight *LOCK BY TIME* and press **SELECT**
 - Set the *START LOCK AT:* time and *END LOCK AT:* time and *HOW OFTEN:*
 - Use the slide bar to turn *LOCK BY TIME* "ON" or "OFF"
- Press **EXIT** until you return to TV viewing

LOCK THE ENTIRE SERVICE TO ENSURE NO TV VIEWING

- Using the numeric key pad on your new remote, enter your 4 digit Password
- Using the blue arrow keys highlight *LOCK SET-TOP BOX NOW* and press **SELECT**



USER TIP: To temporarily unlock a program, press **GUIDE** and using the blue arrow keys, highlight the program and press **SELECT**, enter your parental control password. There are two separate locks available - one for subscription TV channels (Parental Control) and one for pay-per-view (Purchase Control). Each must be entered separately.