


KMTV Whole-Home DVR

Quick Start Guide

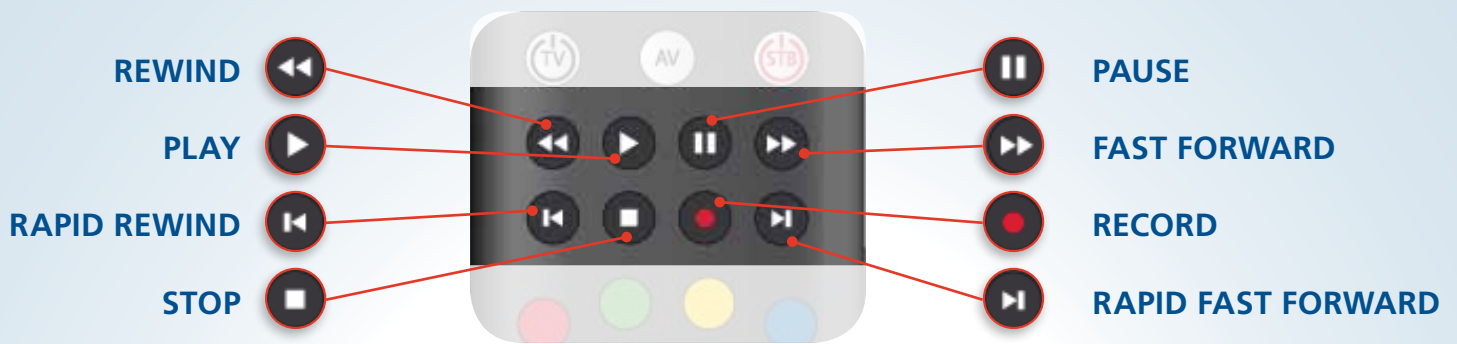

RECORD A SHOW

RECORD LIVE TV

Record the show you are watching by pressing the **RECORD** button. The show will be recorded until it is scheduled to finish. To manually stop the recording before it is scheduled to finish, press **STOP**.

RECORD FROM GUIDE

Use the **GUIDE** to navigate to the show you want to **RECORD**. Press the **RECORD** button to record the show.

RECORD BY SEARCH

Navigate to the Infobar by pressing the **MENU** button, highlight the **SEARCH** icon, and press **OK**. Enter the letters of a show's title using the on-screen keyboard and press **DONE**. Arrow down and highlight **SEARCH GUIDE** and press **OK**. Select **EXTENDED** and press **OK**. Navigate to the program you want to record, highlight it, and press **OK**. Arrow down to **RECORD PROGRAM** for a one-time recording and press **OK**. Or arrow down and highlight **RECORD SERIES** to record all episodes of the show.

VIEW A SHOW

Press the **DVR** button on your remote control to launch the DVR menu. Navigate to the show you want to view. Press **OK**, **PLAY RECORDING** will be highlighted, press **OK** again to view the show. Press **FAST FORWARD** to advance the program. Press **FAST FORWARD** repeatedly to change the fast forward speed by 4, 15, 60, or 300 times. **RAPID FAST FORWARD** will advance the program 30 seconds. Press **REWIND** to reverse the program. Press **REWIND** repeatedly to change the rewind speed by 4, 15, 60 or 300 times. **RAPID REWIND** will rewind the program 60 seconds.

CREATE A SERIES RECORDING

Use the **GUIDE** to navigate to the show you want to record. Highlight the show and press **OK**. Highlight the option **RECORD SERIES** and press **OK**. Press **OK** again and highlight **EDIT SERIES RECORDING** and press **OK**. This menu allows you to choose if you want to record All or New Only episodes to skip re-runs. You can also edit start and stop times for a series recording.

DELETE A SHOW

Press the **DVR** button on your remote control to launch the DVR menu. Navigate to the show you want to delete. Highlight **DELETE RECORDING** and press **OK**.

CONTROL LIVE TV — ON THE TV CONNECTED TO THE DVR BOX.

Press **PAUSE** to pause the program. Programs can be paused for up to 30 minutes as long as the current channel is not changed. To resume watching the program, press **PLAY**. Press **REWIND** to reverse live TV or a recorded program. Press **REWIND** repeatedly to change the rewind speed by 4, 15, 60 or 300 times. **RAPID REWIND** will reverse live TV 60 seconds. Follow the same process to **FAST FORWARD** live TV that has been paused.

LOCK A RECORDING

This will insure that the recording is not deleted when the storage space becomes limited. Press the **DVR** button on your remote control to launch the DVR menu. Navigate to **RECORDINGS**. Press **OK**. Navigate to the show you would like to save and press **OK**. Select **LOCK** and press **OK**.

NOTE: The DVR is not intended to be a long-term storage device. Keep in mind that once you reach your space limitation maximum, older shows will be deleted automatically as new shows are recorded. To avoid losing old recordings, that you would like to keep, it's best to clear out your queue every few days.