

KM TV tips S

Setting Parental Control Locks (*Amino, Entone*)

Activating/Deactivating Parental Controls - *About this Setting:* You must enable this setting in order to enable your Parental Controls.

Click on the **MENU** button on the remote.

Go into **SETTINGS**, click **OK**.

Use the arrow keys to bring the cursor down to the white box by **Parental Control**.

If there is no check in the white box press **OK** to check the box and activate **Parental Controls**.

If there is a check in the white box press **OK** to uncheck the box and deactivate the **Parental Controls**.

Move the cursor down to the **Submit** button on the screen and press **OK** on your remote.



Getting into Parental Controls - *About this Setting:* Parental controls allow you to restrict what channels are available to watch at any given time.

Click on the **MENU** button on the remote.

Go into **SETTINGS**, click **OK**.

Move the cursor to highlight the **Users** tab, click **OK**.

Move cursor to **Parental Control** so that it is highlighted.

Hit **OK** to go into the parental control settings.



Changing the Available Movie Ratings - *About this Setting:* This setting is used to determine the highest rating movie available to be watched on your TV, without entering a Parental Code. Thus if "R" is selected movies of "R" rating or less can be watched without entering a code.

Click on the **MENU** button on the remote.

Go into **SETTINGS**, click **OK**.

Move the cursor to highlight the **Users** tab.

Arrow down to **Parental Control**.

Arrow down to **Movie Rating** and highlight the box and press **OK**.

Use the arrow keys to highlight the option you wish to use and press the **OK** button again.

Move the cursor down to the **Submit** button on the screen and press **OK**.

Changing the Available TV Ratings - *About this Setting:* This setting is used to determine the highest TV rating available to be watched on your TV, without entering a Parental Code. Thus if "TV-14" is selected shows with a rating of "TV-14" or less can be watched without entering a code.

Click on the **MENU** button on the remote.

Go into **SETTINGS**, click **OK**.

Move the cursor to highlight the **User Tab**.

Arrow down to **Parental Control**.

Arrow down to **TV Rating** and highlight the box and press **OK**.

Use the arrow keys to highlight the option you wish to use and press the **OK** button again.

Move the cursor down to the **Submit** button on the screen and press **OK**.

Block a Specific Channel - *About this Setting:* This setting allows you to block a specific channel from being viewed.

Click on the **MENU** button on the remote.

Go into **SETTINGS**, click **OK**.

Arrow down to the **Edit** button, click **OK**.

Arrow down to the channel you would like to block and press **OK**. A symbol will appear if it is blocked.

Move the cursor down to the **Update** button on the screen and press **OK**.

