

KMTV Whole-Home Cloud DVR

User Guide

WHOLE-HOME CLOUD DVR (cDVR) gives you the freedom to record the program you are watching as you are watching it, record up to 6* other programs while you watch another or record an upcoming show you see in the program guide. You can also schedule a series recording so you can catch all episodes of your favorite program. cDVR is software-based and hosted in the cloud. If you're subscribed to cDVR service, all TV's will be capable of the functions below.

RECORD A PROGRAM

Press the **GUIDE** button to view the program guide. Using the arrow keys, highlight the program you want to record and press the **RECORD** button then follow the prompts on the screen. If you are already watching the program, simply press the **RECORD** button to begin recording.

STOP RECORDING

Press the **GUIDE** button to find the recording you would like to stop. Press **STOP** button and follow the on screen directions. If you started the recording using the Guide, the recording will stop when the program is finished.

SETTING UP FOLDERS

Press the **DVR** button followed by the **LEFT** arrow until you see folders. You can set up a folder for each member of your family. Press the **BLUE** color navigation button to create a **New Folder**. Name the folder using the **ARROW/OK** buttons and **Submit**. Your new folder will appear in the list.

PLACING RECORDINGS IN FOLDERS

Press the **DVR** button and select the recording you would like to move to another folder. Press the **GREEN** color navigation button.

Select the **Move To Folder** option and **ARROW** over to the folder that you would like to place it in, select **SAVE**.

FINDING FOLDERS

Press the **DVR** button, then press **LEFT** arrow to view your list of folders. Use the arrow keys to select a specific folder.

WATCH A RECORDING

Press the **DVR** button to view your list of recorded programs. Use the arrow keys to select the recorded program you want to watch and press **PLAY** to start playing the recording.

DELETE A RECORDING

Press the **DVR** button. Use the arrow keys to select the recording you want to delete and follow the on screen directions.

RECENTLY DELETED RECORDINGS

You have 72 hours to restore a deleted recording. Press the **DVR** button 4 times and it will bring you to the Recently Deleted recording. Scroll to the recording you want to restore and press **OK**. Follow the onscreen directions.



REWIND
Rewind through parts of a recording. Press multiple times to rewind faster.

PLAY
Begin or resume watching a recording. Also display/remove the status bar.

SKIP BACK
Skip backwards 10 seconds while watching a recording.

STOP
Stop watching a recording or stop a recording that is in progress.

COLOR NAVIGATION
These buttons will have several functions. Actions will be indicated at the bottom of your TV screen.

DVR
Press to see your list of recorded programs. Press it again to see what is scheduled to be recorded.

PAUSE
Pause the program you are currently watching.

FAST FORWARD
Fast forward through parts of a recording. Press multiple times to go forward faster.

SKIP FORWARD
Skip forward 30 seconds while watching a recording.

RECORD
Record a program.

ARROWS/BROWSE/SEARCH/OK
Press to navigate through the guides, menu options or to make selections.

GUIDE
Press to access the Program Guide

 **MyTVs App** is another way to manage your cDVR. This app will give you the ability to view the programming guide, schedule DVR and use as a remote control. Set up the app on your cell phone or from your desktop computer at: mytv.kmtel.com/iptv.

NOTE: The DVR is not intended to be a long-term storage device. Recordings will be deleted after 12 months. Keep in mind that once you reach your space limitation maximum, older shows will be deleted.

**There are two cDVR plans available: \$9.99/month - 2 streams with 500GB storage, \$12.99/month - 6 streams with 500GB storage.*