

# KMTV Remote Control Guide

Contact us at 634-2511 or visit [www.kmtel.com](http://www.kmtel.com) for more information

## TV, AUD, DVD, VCR, STB

Use one remote to control multiple devices.

## SETUP

Use for programming devices controlled by the remote.

## SKIP FORWARD, SKIP BACK, REWIND, PLAY, FORWARD, STOP, PAUSE, RECORD

These control the DVR functions.

## MENU

Displays the menu.

## GUIDE

Opens the Program Guide.

## DAY +/-

Jump ahead or back one day in the Program Guide.

## COLOR NAVIGATION

These buttons will have several functions. Actions will be indicated at the bottom of your TV screen. While viewing a channel these buttons will be used accordingly.

- **Weather** Current conditions and 5 day forecast.
- **Caller ID Log** Recent calls and messages. Phone line required.
- **What's Hot** Will show you most watched TV, recordings and series.
- **Favorites** From the GUIDE, pull up Favorite channels that you have set up.

## VOL +/-

Raise or lower the volume.

## MUTE

Turn the sound off or on.

## ASPECT RATIO

If applicable, temporarily change the conversion mode from Original Size or Fit to Screen.

## INPUT

In TV control mode, will change the input of the device you are controlling.



## POWER

Turn on/off a selected device.

## LIVE

Return to watching live TV.

## LIST

Display a list of recorded, future and series rules on your DVR.

## INFO

Display the current channel and program information.

## BROWSE, SEARCH, ARROW, OK

Navigate and select onscreen choices.

## (BROWSE) RIGHT ARROW

Browse current station.

## (SEARCH) LEFT ARROW

Search for a full title or word within a title of a program.

## EXIT

Exit the current screen.

## PAGE +/-

Page up or down in lists and Program Guide.

## CHANNEL +/-

Changes to the next higher or lower channel.

## LAST

Recall the last channel you were watching.

## FAV

View your favorite channels.

## NUMBER KEYS (0-9)

Directly select a channel or enter options.

## CLOSED CAPTIONING

Turn on and off.