

PROGRAMMING YOUR REMOTE USING BRAND SEARCH

Determine the brand of your TV set and find the four-digit code. Try the default code: 2448. This code may not work for all TV brands.


TV codes can be found on our website - www.kmtel.com

- Click on Television, then Support.
- Under the Remote, click on Configure Remote.
- Scroll down to find the four-digit TV code.

Make sure your TV set is turned on. *(The set-top box does not need to be turned on to perform this programming feature.)*


1. Press and hold the **1** & **3** buttons at the same time.

- Hold buttons until the TV button lights up on the top left of the remote.
- Release both buttons.

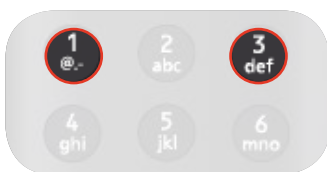

2. Enter the four-digit code for the brand of your TV.


- The **TV** button will remain lit.

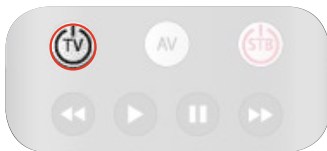



3. Point the remote control at the TV set.

- Press and hold the **TV** button (or the **MUTE** button) until the TV either turns off or brings up the MUTE symbol on screen.

- Release that button. *This step may take up to five minutes.*

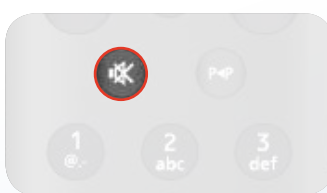

4. Press and hold the **TEXT** button (bottom left) and the **STOP** (above the green with white square) until the TV button is no longer lit up.

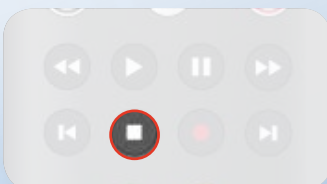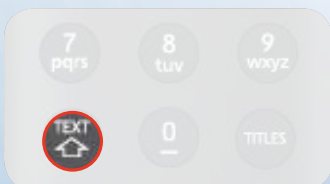

The remote is now programmed for the TV volume and power functions.

PROGRAMMING YOUR REMOTE USING AUTO SEARCH


Should the TV brand not be successfully found by the previous Brand Search method, then Auto Search can be used.

Note: *This process may take awhile — up to 5 minutes — to find your TV code.*

Make sure your TV set is turned on. *(The set-top box does not need to be turned on to perform this programming feature.)*

1. Press and hold the **1** & **3** buttons at the same time.



- Hold buttons until the TV button lights up on the top left of the remote.
- Release both buttons.

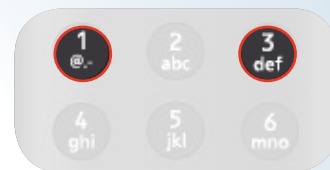



2. Point the remote control at the TV set.

- Press and hold the **TV** button (or the **MUTE** button) until the TV either turns off or brings up the MUTE symbol on screen.

- Release that button. *This step may take up to five minutes.*

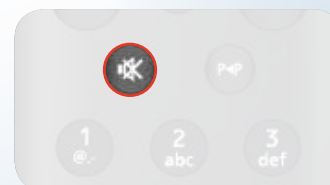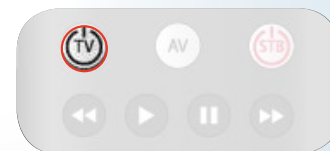

4. Press and hold the **TEXT** button (bottom left) and the **STOP** (above the green with white square) until the TV button is no longer lit up.

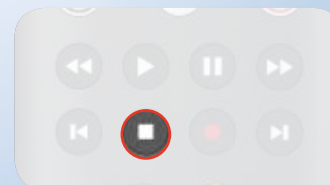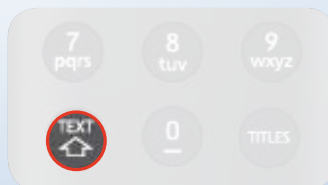

The remote is now programmed for the TV volume and power functions.

If the Auto Search fails to successfully setup operation of the TV set, then the remote is unable to control that particular TV set.