

# Programming Your KMTV Remote

Contact us at 634-2511 or visit [www.kmtel.com](http://www.kmtel.com) for more information

## TV, AUD, DVD, VCR, STB

Use one remote to control multiple devices.

## SETUP

Use for programming devices controlled by the remote.

## SKIP FORWARD, SKIP BACK, REWIND, PLAY, FORWARD, STOP, PAUSE, RECORD

These control the DVR functions.

## MENU

Displays the menu.

## GUIDE

Opens the Program Guide.

## DAY +/-

Jump ahead or back one day in the Program Guide.

## COLOR NAVIGATION

These buttons will have several functions. Actions will be indicated at the bottom of your TV screen. While viewing a channel these buttons will be used accordingly.

- **Weather** Current conditions and 5 day forecast.
- **Caller ID Log** Recent calls and messages. Phone line required.
- **What's Hot** Will show you most watched TV, recordings and series.
- **Favorites** From the GUIDE, pull up Favorite channels that you have set up.

## VOL +/-

Raise or lower the volume.

## MUTE

Turn the sound off or on.

## ASPECT RATIO

If applicable, temporarily change the conversion mode from Original Size or Fit to Screen.

## INPUT

In TV control mode, will change the input of the device you are controlling.

## POWER

Turn on/off a selected device.

## LIVE

Return to watching live TV.

## LIST

Display a list of recorded, future and series rules on your DVR.

## INFO

Display the current channel and program information.

## BROWSE, SEARCH, ARROW, OK

Navigate and select onscreen choices.

## (BROWSE) RIGHT ARROW

Browse current station.

## (SEARCH) LEFT ARROW

Search for a full title or word within a title of a program.

## EXIT

Exit the current screen.

## PAGE +/-

Page up or down in lists and Program Guide.

## CHANNEL +/-

Changes to the next higher or lower channel.

## LAST

Recall the last channel you were watching.

## FAV

View your favorite channels.

## NUMBER KEYS (0-9)

Directly select a channel or enter options.

## CLOSED CAPTIONING

Turn on and off.



# Programming Your KMTV Remote

Contact us at 634-2511 or visit [www.kmtel.com](http://www.kmtel.com) for more information

## Programming Your Remote Using Brand Code

Make sure your TV set is turned on. (The set-top box does not need to be turned on to perform this programming feature.)

1. Manually turn ON the TV that you want to program to the remote.
2. Press and release the **TV** button.
3. Press and hold the **SETUP** button until the **TV** button blinks twice.
4. Press and release the **TV** button again.
  - The TV button will now stay lit.
5. Find your TV brand from the chart and note the assigned number.
6. Press and hold down the **NUMBER** button for your brand while pointing the remote at the TV.
7. Let go of the button when your TV turns off.
8. Press the **POWER** button to turn your TV on.
9. Press and hold **SETUP** until the **TV** button blinks twice.
10. Enter **9 9 5**. The **TV** button will blink twice.
11. Press **POWER** once.
12. Press **STB** once.
13. Press **TV** once.
14. Press and hold **SETUP** until the TV button blinks twice.
15. Press **STB**.

The remote is now programmed for the assigned TV.

## Programming Remote Using Auto Search

If your TV's brand is not listed above, then the Auto Search method can be used.

**Note:** This process may take up to 5 minutes to find your TV code.

1. Manually turn on your TV.
2. Press the **TV** button once.
  - The TV button will blink once.
3. Press and HOLD the **SETUP** button until the **TV** button blinks twice.
4. Type **9 9 1**.
  - The TV button will blink twice.
5. Press and release the **CH +** button continuously until the TV turns off.
  - The remote searches through codes from its built-in library using this method.
6. Press the **SETUP** button after the TV turns off.
  - The TV button light will blink twice to indicate that the code is saved.
7. Press the **POWER** button to turn the TV back on.
8. Follow steps 9- 15 above.

The remote is now programmed for the assigned TV.

If the Auto Search fails to successfully setup operation of the TV set, then the remote is unable to control that particular TV set.

NUMBER	BRAND OF TV
1	Insignia
2	LG
3	Panasonic
4	Philips/Magnavox
5	Samsung
6	Sanyo
7	Sharp
8	Sony
9	Vizio
0	Westinghouse

