


User Manual / Manual de uso

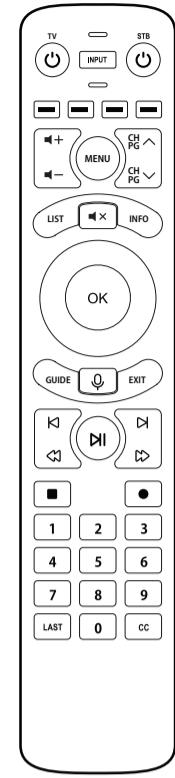

TV: Powers your TV ON and OFF. Enciende y apaga el televisor.

STB: Powers ON and OFF your set top box. Enciende y apaga el conversor.

VOLUME: Controls and mutes TV volume. Controla y silencia el volumen del televisor.

EXIT: Exits current menu and returns to current program. Permite salir del menú actual y regresar al programa actual.


MENU: Takes you to your content menu screen. Lo lleva a la pantalla de menú de contenidos.

VOICE: Activates voice search functionality using microphone at top of remote. Activa la funcionalidad de búsqueda por voz usando el micrófono en la parte superior del control remoto.


GUIDE: Displays program guide. Muestra la guía de programación.

TRANSPORT: Controls DVR programming. Controla la programación del DVR.

- Press and hold Play/Pause + OK until Feedback LED starts blinking. Presione y sostenga Play/Pausa + OK hasta que la LED comience a destellar.
- Feedback LED will stop blinking to confirm pairing. La LED dejará de destellar para confirmar la asociación.

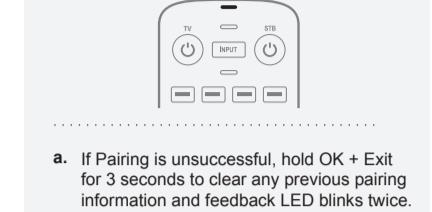

- a. If Pairing is unsuccessful, hold OK + Exit for 3 seconds to clear any previous pairing information and feedback LED blinks twice. Si no se logra hacer la asociación, sostenga OK/SELECCIONAR + Salida por 3 segundos para borrar la información de la asociación anterior.

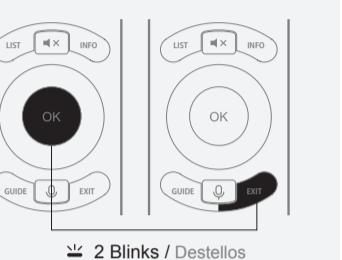

- b. Repeat Steps 1 and 2. Repetir pasos 1 y 2.


- Press and hold OK/SELECT and MUTE until the feedback LED blinks twice. Presione y sostenga OK/SELECCIONAR y SILENCIAR hasta que la LED destelle dos veces.




- Enter Corresponding Device Digit to lock Volume to. Ingrese el dígito del dispositivo correspondiente para bloquear el volumen.
- The feedback LED will blink twice. La LED destella dos veces.



- Press Volume Up key. Presione la tecla de subir volumen.

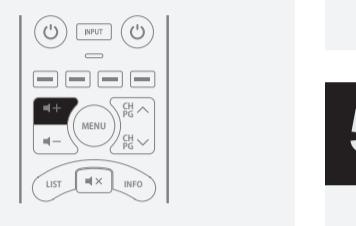


- Press Volume Down key. Presione la tecla de bajar volumen.

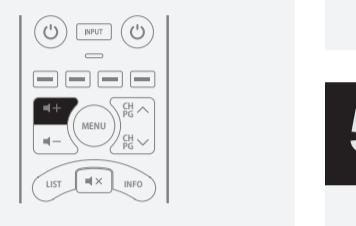

- Complete / Finalizado. ✓


- Press and hold OK/SELECT and MUTE until the feedback LED blinks twice. Presione y sostenga OK/SELECCIONAR y SILENCIAR hasta que la LED destelle dos veces.

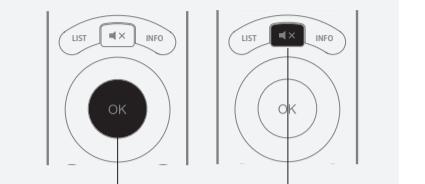

- Press Volume Up key. Presione la tecla de subir volumen.
- Press Volume Down key. Presione la tecla de bajar volumen.



- The feedback LED will display four blinks to indicate that the volume has now been unlocked. La LED destellará cuatro veces para indicar que el volumen ha sido desbloqueado.

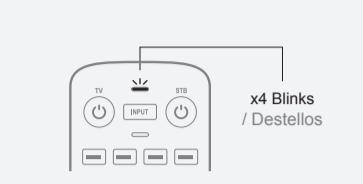

- Complete / Finalizado. ✓

TV Brand Setup Configuración de marca de TV


- Turn on the TV that you wish to setup. Encienda el dispositivo de TV que desea configurar.

- Find your device brand in the Brand Set / Simple Set table below. Note the number that corresponds to your device brand.


Busca la marca del dispositivo en la tabla de configuración de marca / configuración simple que aparece más abajo. Anote el número que corresponde a la marca de su dispositivo.

| TV Brand / Marca de TV | Digit / Dígito |
|------------------------|----------------|
| LG | 1 |
| Panasonic | 2 |
| Philips, Magnavox | 3 |
| RCA | 4 |
| Samsung | 5 |
| Sanyo | 6 |
| Sharp | 7 |
| Sony | 8 |
| Toshiba | 9 |
| VIZIO, Insignia | 0 |

- Press and hold OK/SELECT and MUTE until the feedback LED blinks twice. Presione y sostenga OK/SELECCIONAR y SILENCIAR hasta que la LED destelle dos veces.

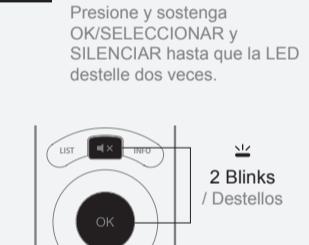


- Press digit key 1. Oprime la tecla del dígito 1.

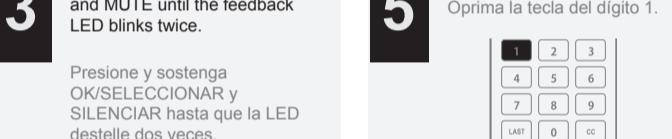

- Press digit key 1. Oprime la tecla del dígito 1.



- Press digit key 1. Oprime la tecla del dígito 1.

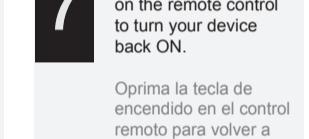

- Press the Power key on the remote control to turn your device back ON.

Oprime la tecla de encendido en el control remoto para volver a encender el dispositivo.

- If this does not work for your device, proceed to Direct Code Entry steps. Si no funciona con su dispositivo, proceda a los pasos de Ingreso directo de código.



- While pointing the remote at the TV, press and hold the number key for your brand that you noted in step 2. Apuntando el control remoto al dispositivo de TV, oprima y sostenga la tecla del número que corresponde a su marca segun lo que anotó en el paso 2.

Si no funciona con su dispositivo, proceda a los pasos de Ingreso directo de código.



- Release the key as soon as the device turns OFF. Suelte la tecla tan pronto como el dispositivo se apague.

LED will go OFF and will blink (ON-OFF) during every code transmitted. La LED se apagará y destellará cuando se transmita cada código.



- Press the OK/SELECT key once feedback LED blinks once. Oprime la tecla OK/SELECCIONAR una vez y la luz LED destellará una vez.

LED will go OFF and will blink (ON-OFF) during every code transmitted.



- Release the key as soon as the device turns OFF. Suelte la tecla tan pronto como el dispositivo se apague.

LED will go OFF and will blink (ON-OFF) during every code transmitted.



- Press the OK/SELECT key once feedback LED blinks once. Oprime la tecla OK/SELECCIONAR una vez y la luz LED destellará una vez.

LED will go OFF and will blink (ON-OFF) during every code transmitted.



- Release the key as soon as the device turns OFF. Suelte la tecla tan pronto como el dispositivo se apague.

LED will go OFF and will blink (ON-OFF) during every code transmitted.



- Press the OK/SELECT key once feedback LED blinks once. Oprime la tecla OK/SELECCIONAR una vez y la luz LED destellará una vez.

LED will go OFF and will blink (ON-OFF) during every code transmitted.



- Release the key as soon as the device turns OFF. Suelte la tecla tan pronto como el dispositivo se apague.

LED will go OFF and will blink (ON-OFF) during every code transmitted.



- Release the key as soon as the device turns OFF. Suelte la tecla tan pronto como el dispositivo se apague.

LED will go OFF and will blink (ON-OFF) during every code transmitted.



- Release the key as soon as the device turns OFF. Suelte la tecla tan pronto como el dispositivo se apague.

LED will go OFF and will blink (ON-OFF) during every code transmitted.



- Release the key as soon as the device turns OFF. Suelte la tecla tan pronto como el dispositivo se apague.

LED will go OFF and will blink (ON-OFF) during every code transmitted.



- Release the key as soon as the device turns OFF. Suelte la tecla tan pronto como el dispositivo se apague.

LED will go OFF and will blink (ON-OFF) during every code transmitted.



- Release the key as soon as the device turns OFF. Suelte la tecla tan pronto como el dispositivo se apague.

LED will go OFF and will blink (ON-OFF) during every code transmitted.



- Release the key as soon as the device turns OFF. Suelte la tecla tan pronto como el dispositivo se apague.

LED will go OFF and will blink (ON-OFF) during every code transmitted.



- Release the key as soon as the device turns OFF. Suelte la tecla tan pronto como el dispositivo se apague.

LED will go OFF and will blink (ON-OFF) during every code transmitted.



- Release the key as soon as the device turns OFF. Suelte la tecla tan pronto como el dispositivo se apague.

LED will go OFF and will blink (ON-OFF) during every code transmitted.



- Release the key as soon as the device turns OFF. Suelte la tecla tan pronto como el dispositivo se apague.

LED will go OFF and will blink (ON-OFF) during every code transmitted.



- Release the key as soon as the device turns OFF. Suelte la tecla tan pronto como el dispositivo se apague.

LED will go OFF and will blink (ON-OFF) during every code transmitted.



- Release the key as soon as the device turns OFF. Suelte la tecla tan pronto como el dispositivo se apague.

LED will go OFF and will blink (ON-OFF) during every code transmitted.



- Release the key as soon as the device turns OFF. Suelte la tecla tan pronto como el dispositivo se apague.

LED will go OFF and will blink (ON-OFF) during every code transmitted.



- Release the key as soon as the device turns OFF. Suelte la tecla tan pronto como el dispositivo se apague.

LED will go OFF and will blink (ON-OFF) during every code transmitted.



- Release the key as soon as the device turns OFF. Suelte la tecla tan pronto como el dispositivo se apague.

LED will go OFF and will blink (ON-OFF) during every code transmitted.



- Release the key as soon as the device turns OFF. Suelte la tecla tan pronto como el dispositivo se apague.

LED will go OFF and will blink (ON-OFF) during every code transmitted.



- Release the key as soon as the device turns OFF. Suelte la tecla tan pronto como el dispositivo se apague.

LED will go OFF and will blink (ON-OFF) during every code transmitted.



- Release the key as soon as the device turns OFF. Suelte la tecla tan pronto como el dispositivo se apague.

LED will go OFF and will blink (ON-OFF) during every code transmitted.



- Release the key as soon as the device turns OFF. Suelte la tecla tan pronto como el dispositivo se apague.

LED will go OFF and will blink (ON-OFF) during every code transmitted.



- Release the key as soon as the device turns OFF. Suelte la tecla tan pronto como el dispositivo se apague.

LED will go OFF and will blink (ON-OFF) during every code transmitted.



- Release the key as soon as the device turns OFF. Suelte la tecla tan pronto como el dispositivo se apague.

| Setup Codes For Audio Brands | |
|------------------------------|---|
| Brand | Code(s) |
| Accurian | 21609 |
| Acoustic Audio | 24683, 24907 |
| Aiwa | 21641, 20189 |
| Alco | 21390 |
| Altec Lansing | 22595, 21485, 24609, 22720, 22138 |
| AMC | 21077 |
| Anam | 21609 |
| Antheim | 21609, 23835, 22220 |
| Anthem Statement | 21609, 23835, 22220 |
| Apex Digital | 24334 |
| Arcam | 21289, 22138, 20189, 22241 |
| Arvani | 22454 |
| Audio Blast | 21289 |
| Audio Control | 21289 |
| Audio Net | 22138 |
| Audio Solutions | 23622 |
| AudioControl | 21289 |
| Audioengine | 24311 |
| AudioSource | 23721 |
| Audiotronic | 21289 |
| Audiovox | 21390 |
| Aura | 22454 |
| Avio | 25106 |
| Axess | 24095 |
| Axiim | 24951 |
| B & W | 23965, 22441, 23943 |
| BÖHM | 24280 |
| Bose | 21629, 21933, 24307, 21841, 23708, 24024, 25230, 23706, 23832 |
| Boston Acoustics | 23698 |
| Bowers & Wilkins | 23965, 22441, 23943 |
| Cambridge Audio | 22138 |
| Canston | 25138 |
| Carver | 20189, 22138, 21289 |
| Classe | 21918, 21915 |
| Clatronic | 21918 |
| Coby | 21389, 23654, 23218 |
| Craig | 24465, 24466 |
| Current Audio | 25190, 25191 |
| Curtis | 21389, 23942 |
| Curtis Mathes | 20823 |
| Cyrus | 22138 |
| Definitive Technology | 24415, 24026, 23645 |
| Denon | 22857, 23347, 23643, 23642, 22279, 22706, 22502, 24025, 24530, 24054, 21289 |
| Durabrand | 21561 |
| Dynavox | 23231 |
| Dynex | 22584, 23951 |
| Emotiva | 23763, 24059, 24101, 24641 |
| Enclave Audio | 24800 |
| Energy | 23915 |
| Energy Sistem | 23915 |
| Episode | 25115, 25107 |
| Epworth | 21641, 20189 |
| Gateway | 21077, 21517 |
| GE | 22611 |
| General Electric | 22611 |
| Go Video | 21868 |
| GPX | 25103, 21389 |
| Haier | 23516 |
| Halcro | 21289, 22138 |
| Harman/Kardon | 22241, 23391, 22660, 23756, 21831, 20189, 23517 |
| iLive | 23175 |
| Inkel | 23120, 23770, 21077, 24090 |
| Insignia | 23951, 21077, 22175, 21030, 22472, 24424, 22584, 21751, 23770, 22583 |
| Integra | 21805, 21320, 23992 |
| iWave | 24971 |
| Jamo | 23915 |
| JBL | 23756, 22287, 22241, 23391, 23535 |
| Jensen | 21389 |
| JVC | 21676, 23049, 21868 |
| Kenwood | 21570, 22197 |
| KLH | 21390 |
| Klipsch | 23915, 24198, 24200, 25152 |
| Koss | 21266 |
| Krell | 22138 |
| Lenox | 21561 |
| Leon | 24233 |
| LG | 22197, 23217, 22676, 22284 |
| Linn | 22138, 20189 |
| Liquid Video | 21266 |
| Logitech | 21408 |
| Magnavox | 20189, 21831, 23282, 22138, 21289 |
| Marantz | 21289, 22138, 20189, 21831, 23347, 24118 |
| Martin Logan | 23526, 24271 |
| McIntosh | 21289 |
| Micromega | 21289 |
| Monoprice | 24505 |
| Musicmagic | 20189 |
| Myryad | 21831, 21289 |
| NAD | 20320, 21609 |
| Nakamichi | 21570 |
| New Acoustic Dimension | 20320, 21609 |
| NexxTech | 21751 |
| Norcent | 21389, 21751 |
| Nova | 21389 |
| Nu Force | 23968 |

| Onkyo | 21805, 21320, 24041, 23992, 24533, 23984, 23326 |
|--------------------|--|
| Onn | 25042, 25041 |
| Optimus | 21935, 20823 |
| Orbitsound | 24098 |
| Oritron | 21266 |
| Outlaw | 21709 |
| Panasonic | 22967, 23055, 21633, 23323, 23767, 21676 |
| Paradigm | 24536, 23526, 24555, 24846 |
| PeachtreeAudio | 24522 |
| Peerless-AV | 25153 |
| Philco | 21390, 21831 |
| Philips | 21831, 20189, 22459, 23962, 22289, 23379, 23282, 21266, 22675, 22138, 21289, 24382 |
| Philips Magnavox | 20189 |
| Pinnacle Speakers | 23774, 23728 |
| Pioneer | 21935, 21384, 20823, 23384, 23956 |
| Polk Audio | 23429, 21289, 22242, 22138, 20189 |
| Proficient | 23661 |
| Proscan | 21254 |
| Pyle | 23705, 24333 |
| RCA | 21254, 22611, 21935, 22655, 20823, 23969, 21390, 21609, 22544 |
| RichSoundResearch | 25138 |
| Rotel | 23896, 21676 |
| RSR | 25138 |
| Samsung | 21868, 22660, 22137, 22241 |
| Sansui | 20189 |
| Scandyna | 22348 |
| Scott | 21609 |
| Sharp | 23736, 23097, 23929 |
| Sherbourn | 23763 |
| Sherwood | 21077, 23120, 21517, 23136, 24090, 23770, 24424 |
| Sherwood Newcastle | 21077 |
| Simaudio | 22138 |
| SnapAV | 25115, 25107 |
| Sonos | 23919 |
| Sony | 22172, 21058, 21622, 23700, 22582, 23487 |
| SpeakerCraft | 23661 |
| Stereophonics | 21935 |
| Sunfire | 21570 |
| TAD | 20823 |
| Teac | 21609, 21390, 24333 |
| Technics | 21633, 22967 |
| The Gryphon | 22138 |
| Thorens | 21289 |
| Toshiba | 23627, 21320, 21935 |
| TruAudio | 24940 |
| Venturer | 21390 |
| VIZIO | 22454, 25095 |
| Yamaha | 22467, 22061, 20176, 22458, 21331, 23667, 22021, 23267, 21422 |
| ZVOX | 22332, 23913, 22334 |

| Setup Codes For Television Brands | |
|-----------------------------------|--|
| Brand | Code(s) |
| 888 | 13636 |
| Accurian | 11803 |
| Acer | 11339, 13630, 14143 |
| ad notam | 14382 |
| Admiral | 13879 |
| Advent | 11570 |
| Affinity | 13717, 13577, 13716 |
| Aftron | 10891 |
| Aiwa | 1142 |
| Akai | 11675, 12051, 11688, 11032, 11692, 11207, 11385, 11670, 12232, 13477 |
| Alba | 12372 |
| AOC | 11589, 13635, 12014, 12087, 12621, 11590, 11348 |
| Aomni | 11623 |
| Apex Digital | 12397, 11217, 14350, 10890 |
| Ario | 12397 |
| Astar | 11531, 11738 |
| Asus | 13340, 11867 |
| Atak | 12397 |
| Atvio | 11531, 13478, 10891, 13636, 13879 |
| Atyme | 12746 |
| Audiovox | 11868, 11276, 11564, 10846, 12413, 10802, 11766, 11769, 13065, 11803 |
| Auria | 12014, 13519, 12087, 12855 |
| Aventura | 11394 |
| Avera | 12397, 12049 |
| Avol | 13382, 12735, 12397 |
| Awa | 12480 |
| Axon | 12397 |
| Axess | 13593, 14888 |
| BBK | 12049 |
| BenQ | 12098 |
| Blu:sens | 12735 |
| Bolva | 12397 |
| Boss Audio Systems | 11314 |
| Bravis | 13477 |
| Broksonic | 11670, 11892 |
| Bush | 12360 |
| Byd:sign | 11311 |
| Calypso | 13519 |

| | |
|--------------------------|---|
| Casio | 11205 |
| Champion | 11142 |
| Changhong | 13477, 11589 |
| Christie | 14951 |
| Cineon | 13951 |
| Citizen | 10802, 11670, 11671, 11672 |
| Claris | 13807 |
| Coby | 13478, 12315, 12306, 12344, 12314, 12345, 11634, 12338, 12326, 12340, 13629, 11538, 11738, 13493, 13646 |
| Commercial Solutions | 11447 |
| Contex | 14053 |
| Cornea | 13677 |
| Craig | 13423 |
| Curtis | 12855, 13577, 12397, 13895, 12352, 11523, 14053, 13636, 11326, 11314, 13382, 13595, 13717, 13899, 14093 |
| Curtis Mathes | 12051, 11661, 12496 |
| Cytron | 11326 |
| D.Boss | 11314 |
| Daewoo | 11661, 10661, 12434, 11032 |
| Daytek | 13651 |
| Dell | 11264, 12372, 12731 |
| Delta Electronics | 11369 |
| DiBoss | 11314 |
| Digital Lifestyles | 11765 |
| Digitrex | 14207 |
| Disney | 11892, 11394 |
| DNS | 13879 |
| Dukane | 11398, 11457 |
| Dumont | 10017 |
| Durabrand | 11394, 11570, 11034 |
| Dynex | 12049, 11892 |
| Eagle Kingdom Technology | 14083 |
| EKT | 14083 |
| Electric Mirror | 13166 |
| Electrograph | 11623, 11755 |
| Electrohome | 11672, 11570, 11670 |
| Electron | 12397, 12855 |
| Elektra | 10017, 11661 |
| Element | 13559, 14 |