

Programming Your KMTV Remote

Contact us at 634-2511 or visit www.kmtel.com for more information.

TV
Powers your TV on and off.

VOLUME
Controls TV volume.

MENU
Takes you to your content menu screen.

MUTE
Mutes the TV volume.

LIST
Displays list of recorded, future and series rules on DVR.

GUIDE
Displays program guide.

VOICE
This microphone button is not compatible with our service.

DVR CONTROLS
Controls DVR programming.

LAST
This button will bring you back to the last channel you were watching.

STB
Powers set-top box on and off.

LED
This light blinks to confirm certain functions.


CHANNEL PAGE
From the GUIDE, page up or down to channels.

INFO
Displays the current channel and program information.

EXIT
Exits current menu and returns to current programming.

COLOR NAVIGATION
These buttons have several functions. Actions will be indicated at the bottom of the TV screen. While viewing a channel, these buttons will be used accordingly.

- **Weather** - Gives current conditions and 5-day forecast.
- **Caller ID Log** - Shows recent calls and messages. Phone line is required.
- **What's Hot** - Will show you most-watched TV, recordings and series.
- **Favorites** - From the GUIDE, pull up Favorite channels that you have set up.

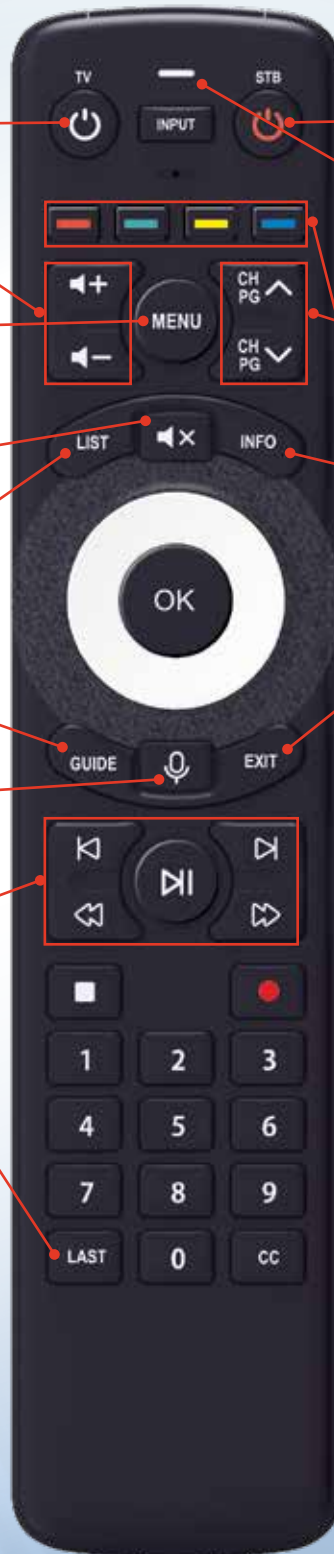

Programming Your KMTV Remote

Contact us at 634-2511 or visit www.kmtel.com for more information.

Programming Your Remote to the TV Using Quick Codes

1. Manually turn ON the TV that you wish to program to the remote.
2. Find the **TV Brand** in table and make note of the number that corresponds to your device brand.
3. Press and hold **OK** and **Mute** until the **LED** blinks twice.
4. Press the **OK** once, **LED** blinks once.
5. Press **# Key 1**.
6. While pointing the remote at the TV, press and hold the **# Key** for your TV brand.
 - a. Release the key as soon as the device turns OFF.
 - b. **LED** will go OFF and will blink (ON - OFF) during every code transmitted.
7. Press the TV power button to turn your TV back ON.

Programming your remote using Quick Codes will work in most cases. However, if you run into trouble, try the steps below.

Programming Your Remote to the TV Using 5-Digit TV Codes

1. Turn ON the TV.
2. Refer to **Setup Codes for Television Brands** for the TV you would like to control. These codes can be found on our website at <https://www.kmtel.com/kmtv-guides/>. Look for the remote you are programming and find the **TV Codes**.
3. Press and hold **OK** and **Mute** until the **LED** blinks twice.
4. Press **# Key 1**.
5. Enter the 5 digit TV Code that you noted in step 2. The **LED** will blink twice to indicate successful programming.
6. Press the TV power key on the remote.
7. If you TV turns off, process is complete. If TV does not turn off, repeat steps 2-7 using the next TV code in the chart.

Bluetooth Pairing – When Set-Top Box is Not Installed Next to the TV

1. Press and hold **Play/Pause + OK** until **LED** starts blinking.
2. **LED** will stop blinking to confirm pairing.
 - a. If Pairing is unsuccessful, hold **OK + Exit** for 3 seconds to clear any previous pairing information and **LED** blinks twice.
 - b. Repeat Steps 1 and 2.

Quick Codes

TV BRAND	# KEY
LG	1
Panasonic	2
Philips, Magnavox	3
RCA	4
Samsung	5
Sanyo	6
Sharp	7
Sony	8
Toshiba	9

